



# Canon PowerShot SD1300 IS Battery Replacement

This replacement guide is for a faulty Canon PowerShot SD1300 IS battery and is step by step on how to replace it.

Written By: Clayton



## INTRODUCTION

This repair guide will show you how to properly replace a faulty battery to get your camera functioning and powering correctly.

## Step 1 — Battery



- Slide cover to open the battery compartment.

## Step 2



- Slide the battery compartment lever away from Canon PowerShot SD1300 IS to release the battery.

## Step 3



- Remove battery for replacement.

To reassemble your device follow steps in reverse order to fully replace your faulty battery. The device should power on and be functioning as normal.

This document was last generated on 2017-06-19 08:33:35 AM.